



EA eDIP240-7 compiler manual

Mai 2012

© ELECTRONIC ASSEMBLY GmbH

Table of Contents

1 Overview	4
2 Syntax rules	5
3 Compiler Functions	6
4 Compiler Options	8
4.1 General	8
4.2 Transfer	9
4.3 Font	10
4.4 WinFont	11
4.5 ExportOverview	12
4.6 ExportWinfont	13
4.7 LogFontWidth	14
4.8 Picture	15
4.9 SystemMacros	16
4.10 ExportMacro	17
4.11 Macro	18
4.12 TouchMacro	19
4.13 MenuMacro	20
5 EA eDIP240-7 commands	21
5.1 Terminal	21
5.2 Text	22
5.3 Display	23
5.4 Draw	24
5.5 Flashing	25
5.6 Bitmap	26
5.7 Clipboard	27
5.8 Bargraph	28
5.9 Macros	29
5.10 Touch	30
5.11 Menu	33
5.12 Other commands	34
6 Default Fonts	35
6.1 Terminal 8x8	35
6.2 Font 4x6	36
6.3 Font 6x8	37
6.4 Font 7x12	38
6.5 Geneva 10	39
6.6 Chicago 14	40
6.7 Swiss 30	41
6.8 BigZif 57	42
7 Internal Pattern	43
8 Internal Border	44
9 Link Modes	45
10 BLH format	46

11 How-to-use	47
11.1 Factory Setting	49
11.2 RS485 - Factory Setting	50
11.3 Place Strings - BEGINNER	52
11.4 Text linking - EXPERT	54
11.5 BMP file - BEGINNER	56
11.6 3 simple touch buttons - BEGINNER	57
11.7 Radio group - BEGINNER	59
11.8 Keypad - EXPERT	60
11.9 Free draw area with clipboard - BEGINNER	62
11.10 Free draw area with clipboard - EXPERT	63
11.11 Clipboard - EXPERT	65
11.12 Frame - BEGINNER	67
11.13 GrafikModes - EXPERT	69
11.14 Bargraph by touch - BEGINNER	73
11.15 Bargraph by touch - EXPERT	74
11.16 Menue - BEGINNER	75
11.17 Menue - EXPERT	77
11.18 Automatic Macro - BEGINNER	79
11.19 Automatic Macro - EXPERT	80
11.20 Outputs - BEGINNER	82

1 Overview

General

The EA eDIP240-7 is able to store many pictures, fonts and macros in internal EEPROM memory. The EA KIT Editor is a powerful, free of charge software tool to create those macros and to store the pictures and fonts very easily.

The EA KIT Editor combines 3 functions:

- The editor itself which allows a simple definition of the macros, pictures and fonts like a standard text editor.
- The compiler which translates the text into the uploading code and shows up syntax error.
- The transmitter which search the right connection and uploads the data into the EA eDIP240-7.

2 Syntax rules

ESC	The ESC character (\$1B, 27d) is represented by the number sign '#'. The escape character must always be the first character in a line (except for tabs and spaces). This is followed by command letters and any parameters.
Comma	The comma is used to separate the parameters of a macro.
Numbers	All numbers are converted to binary values. Decimal, hexadecimal and binary numbers can be written. Example: 163(dez) = \$A3(hex) = %10100011(bin)
Comments	Comments must begin with a semicolon. Example: ; this is a comment
Text	Text (strings) must be enclosed within quotation marks " " or ' '. It is possible to use Hex-values between curly brackets {}. ASCII numbers can also be entered directly. Example (output of "abc-def-xyz"): #ZL0,0,"abc",45,'def',{2D78797A} KitEditor: double click within the curly brackets or quotation marks opens a EditBox, use the mouse to select special characters. Please make sure that you have selected the correct font (right click on the font and 'Select Font for EditBox')
Commands	Command letters and parameters specified in the EA eDIP240-7 data sheet are valid. Two exceptions facilitate the creation of command lines: 1. The <NUL> is appended automatically by the compiler. This means commands in which a string is output, the <NUL> no longer has to be entered as the end identifier. Example: #ZL 0,0,"Text" 2. In the Send bytes command, the number of bytes to be sent is not specified; this number is calculated automatically by the compiler. Example: #SB 1,2,"Test"
Constants	Words without quotation marks are interpreted as numeric constants, which have to be defined first. The name of a constant can have be up to 60 characters and must begin with a letter followed by letters, numbers or underscores. Up to 2000 constants can be defined. Please note that Compiler Options like e.g. INFO or MACRO can not be used. Example: CORNER_X=5; the word CORNER_X is replaced with immediate effect by the value 5.
String Constants	A string-constant is a constant name between two exclamation marks Example1: !NAME! = "example text" Example2: !NAME! = "abc",45,'def',{2D78797A}
Upper / lower case	No difference is made between upper case and lower case.

3 Compiler Functions

Calculating

The 4 basic mathematical operations +, -, * and / can be applied to numeric constants and numbers. Round brackets can be used, and multiplication and division come before addition and subtraction.

Example: `#RL X,Y, X+WIDTH, Y+HEIGHT`

following C-style operations are also possible:

- pre/post increment and decrement: ++, --; e.g: ++a, b++, --c, d--
- shift and bit operations: <<, >>, &, |, ^
- combined operators: *=, /=, +=, -=, <<=, >>=, &=, |=, ^=

During compiling procedure all constants are calculated and transformed to fixed numbers.

Functions

During compiling procedure all functions are calculated and transformed to fixed numbers.

Following functions are available:

LO(value) returns the Low-Byte

HI(value) returns the High-Byte

MIN(value1,value2,...) returns the minimum value

MAX(value1,value2,...) returns the maximum value

AVG(value1,value2,...) returns the average value

RANDOM(min,max)

RANDOM(min,max,delta)

returns a random value from the range min..max

delta = maximum difference to the last random value

MOD(v, d) the modulo function returns the remainder of the division v/d

SIN(w, a) **COS**(w, a) **TAN**(w, a)

w = angle in tenth of degree

a = amplitude

to calculate the bounding box of an [image](#)^[15] following functions are available:

PICTURE_W(nr) returns the width

PICTURE_H(nr) returns the height

to calculate the bounding box of a [Stringconstant](#)^[5] following functions are available:

STRING_W(!NAME!, par, font) returns the width

STRING_H(!NAME!, par, font) returns the height

font = font number (eDIP command [#ZF](#)^[22])

par = **STRING_P**(zoomX, zoomY, height)

this values needs the compiler to calculate the correct outline in functions

STRING_W and **STRING_H**

zoomX, zoomY = zoom factor 1..8 (eDIP command [#ZZ](#)^[22])

height = additional line spacing between two lines 0..15 (eDIP command [#ZY](#)^[22])

Example:

```
!TEXT! = "Hello World"

font      = SWISS30B
zoomX     = 1
zoomY     = 1
addheight = 3

Makro: MnPowerOn
#ZF font
#ZZ zoomX, zoomY
#ZY addheight

par = STRING_P(zoomX, zoomY, addheight)
w = STRING_W(!TEXT!, par, font)
h = STRING_H(!TEXT!, par, font)
x = (XPIXEL-w)/2
y = (YPIXEL-h)/2
#RS x, y, x+w-1, y+h-1
#ZV INVERS
#ZL x, y, !TEXT!
```

String Functions A string-function converts a value into a string constant the function is between two exclamation marks. Following functions are available:

```
!STR(value, digits)!    for decimal numbers
!HEXSTR(value, digits)! for hexadecimal numbers
!BINSTR(value, digits)! for binary numbers
digits = 0: variable length
digits > 0: fix numbers of digits with leading zeros
digits < 0: fix numbers of digits with leading spaces
```

4 Compiler Options

4.1 General

`eDIP240-7 "title"`

Defines EA eDIP240-7 as target. "title" is a short description for the project. It is shown on the display when uploading the EEPROM memory of the module.

`SIMULATION`

Starts the PC simulator after compiling the .kmc file. All contents of the screen can be simulated on the PC.



`DESTINATION <new.eep>`

Specifies a new file name for the EEPROM upload file. Optionally you can choose another path for the destination file.

`INCLUDE <file>`

`INCLUDE <file>, number`

Includes the contents of the file <file> to be used in this actual file. This makes it possible to divide a project up into a number of source files. The file should have the extension *.kmi. The optional parameter (number) defines how often the file will be included.

`PATH <path>`

Sets a new path to find the following files.

`CODETABLE: nr`

A code table is useful adapt different ASCII tables. With that, the ASCII code can be changed for some single character (e.g. "ä", "ß"). Up to 255 different code tables nr (1..255) can be defined. nr = 0 will disable all conversion.

Example:

```
CodeTable: 1 ; use codetable 1 for *.FXT fonts with
DOS-Code
'€' = 128
'äöüÄÖÜß' = $84,$94,$81, $8E,$99,$9A, $E1
```


4.2 Transfer

`AUTOSCAN: n1`

Scan baudrate for connected eDIP on COM/USB before programming
n1=0: autoscan off, use `baud` for connecting and programming
n1=1: autoscan on, search baudrate automatically and programm with
baudrate `baud`

`COMx: baud`

With this statement the COM port and baud rate is defined.

`USB: baud, "device"`

With this statement the USB device and baud rate is defined.
If the EA EVALeDIP240 is connected to the USB, "device" is "`eDIP
Programmer`".

`RS485ADR: adr`

Selects the eDIP with RS485 address "adr" before uploading the
macros.

"adr" can be a number from 0..255.

(see example [INIT_with_RS485_address.KMC](#)^[50])

`VERIFY`

Verifies the complete contents of the EEPROM memory after upload.

4.3 Font

FONT: *nr*, <file>

Defines a font file which will be assigned to the number *nr* (1..15).
<file> can be *.FXT format.
Font number 0 is internal 8x8 terminal font and can not be changed

(see How-to-use example [Place Strings - BEGINNER](#)^[52])

predfined fonts (`include <..\default_font.kmi>`):

```
; default fonts (max. 31 fonts number 1..32)
FONT8x8   = 0           ; internal terminal font
FONT4x6   = 1
FONT6x8   = 2
FONT7x12  = 3
GENEVA10  = 4
CHICAGO14 = 5
SWISS30B  = 6
BIGZIF57  = 7
```

PATH: <..\FONTS\>

Font: FONT4x6, <4x6.FXT>
Font: FONT6x8, <6x8.FXT>
Font: FONT7x12, <7x12.FXT>

Font: GENEVA10, <GENEVA10.FXT>
Font: CHICAGO14, <CHICAG14.FXT>
Font: SWISS30B, <SWISS30B.FXT>

Font: BIGZIF57, <BIGZIF57.FXT>

see Character Table
[Terminal 8x8](#)^[38]

[Font 4x6](#)^[38]
[Font 6x8](#)^[37]
[Font 7x12](#)^[38]

[Geneva 10](#)^[39]
[Chicago 14](#)^[40]
[Swiss 30](#)^[41]

[BigZif 57](#)^[42]



4.4 WinFont

WINFONT: nr, "name",script,style, regions..., size


Defines a Windows font and assigns to font number nr (1..15).

The best is to double click on "name" to edit all parameter.

Select the start-character by pressing the left mouse button and move to the end-character.

Additional regions can be selected with the SHIFT-key.

(see How-to-use example [Place Strings - BEGINNER](#)⁵²)

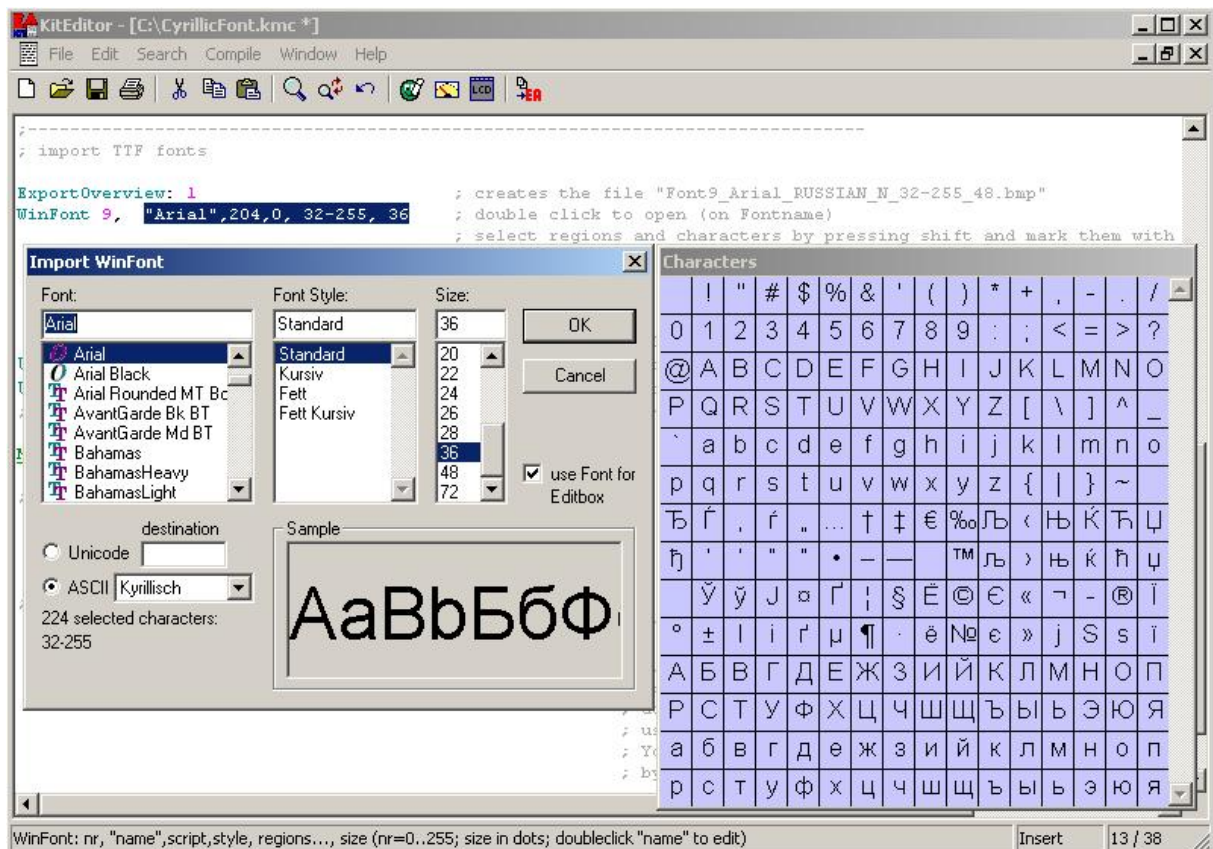

4.5 ExportOverview

`EXPORTOVERVIEW: n1`

This statement enables the generation of a BMP file for all following WinFonts.

This is good to get an overview which character are available.

n1= 1: an bitmap will be exported

n1= 0: no export

Example:

```
ExportOverview: 1
WinFont: 9, "Arial", 0, 0, 32, 127, 48 ; export "Font9_Arial_ANSI_N_32-127_48.bmp"
```

Font9_Arial_ANSI_N_32-127_48.bmp:

+ Lower Upper	\$0 (0)	\$1 (1)	\$2 (2)	\$3 (3)	\$4 (4)	\$5 (5)	\$6 (6)	\$7 (7)	\$8 (8)	\$9 (9)	\$A (10)	\$B (11)	\$C (12)	\$D (13)	\$E (14)	\$F (15)
\$20 (dez: 32)		!	"	#	\$	%	&	'	()	*	+	,	-	.	/
\$30 (dez: 48)	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
\$40 (dez: 64)	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
\$50 (dez: 80)	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
\$60 (dez: 96)	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
\$70 (dez: 112)	p	q	r	s	t	u	v	w	x	y	z	{		}	~	□

4.6 ExportWinfont

```
EXPORTWINFONT: n1
```

n1= 1: Exports all following win fonts as a FXT-File. The file is stored in project path.

To change or add some character it can easily be edited with the "KitEditor.exe" or another simple text editor .

n1= 0: no FXT-export will be done.

```
ExportWinFont: 1  
WinFont: 9, "Arial",0,0, 66,67, 8 ; use only character 'B' and 'C'
```

Font9_Arial_ANSI_N_66-67_8.fxt:

```
; First Nr : 66  
; Last Nr : 67  
; Typ : monospaced  
; width : 7  
; height : 8
```

```
66 $42 'B'
```

```
#####..  
#...#..  
#...#..  
#####..  
#...#..  
#...#..  
#...#..  
#####..
```

```
67 $43 'C'
```

```
..###..  
.#...#..  
#.....  
#.....  
#.....  
#.....  
.#...#..  
..###..
```

4.7 LogFontWidth

LOGFONTWIDTH: n1

Each character in proportional font does have an individual width. The statement LOGFONTWIDTH provides the width for all characters in form of a table. The result is in LOG file (find it in project directory).

n1 > 0: specifies the count of column

n1 = 0: no table will be generated

Example:

LogFontWidth: 4

WinFont: 9, "Arial", 0, 0, 32, 127, 24

Output in Logfile:

```
Import WinFont "Arial", ANSI
height: 24 dots, used codes: 32..127, 5182 bytes
width: 32:' '= 7 33:'!' = 8 34:'"' = 9 35:'#' = 13
36:'$' = 13 37:'%' = 21 38:'&' = 16 39:''' = 5
40:'(' = 8 41:')' = 8 42: '*' = 9 43:'+' = 14
44:',' = 7 45:'-' = 8 46: '.' = 7 47: '/' = 7
48:'0' = 13 49:'1' = 13 50:'2' = 13 51:'3' = 13
52:'4' = 13 53:'5' = 13 54:'6' = 13 55:'7' = 13
56:'8' = 13 57:'9' = 13 58:':' = 7 59: ';' = 7
60:'<' = 14 61:'=' = 14 62:'>' = 14 63:'?' = 13
64:'@' = 24 65:'A' = 15 66:'B' = 16 67:'C' = 17
68:'D' = 17 69:'E' = 16 70:'F' = 15 71:'G' = 19
72:'H' = 17 73:'I' = 6 74:'J' = 12 75:'K' = 16
76:'L' = 13 77:'M' = 19 78:'N' = 17 79:'O' = 19
80:'P' = 16 81:'Q' = 19 82:'R' = 17 83:'S' = 16
84:'T' = 14 85:'U' = 17 86:'V' = 15 87:'W' = 23
88:'X' = 15 89:'Y' = 16 90:'Z' = 15 91:'[' = 7
92:'\' = 7 93:']' = 7 94:'^' = 12 95:'_' = 13
96:'` = 8 97:'a' = 13 98:'b' = 14 99:'c' = 12
100:'d' = 14 101:'e' = 13 102:'f' = 7 103:'g' = 14
104:'h' = 14 105:'i' = 5 106:'j' = 6 107:'k' = 12
108:'l' = 6 109:'m' = 20 110:'n' = 14 111:'o' = 13
112:'p' = 14 113:'q' = 14 114:'r' = 8 115:'s' = 12
116:'t' = 7 117:'u' = 14 118:'v' = 11 119:'w' = 17
120:'x' = 11 121:'y' = 12 122:'z' = 12 123:'{' = 8
124:'|' = 6 125:'}' = 8 126:'~' = 14 127:'. ' = 18
```

4.8 Picture

```
PICTURE: nr,<file>  
PICTURE: nr <file1>,<file2>
```

It is convenient to store all bitmap in EEPROM; this will save transfer time via serial interface. The statement PICTURE defines a bitmap <file> with nr (0..255). <file> has to be a monochrome BMP. Optionally 2 different pictures can be defined as <file1> and <file2>. <file1> is for touch key/ switch and <file2> will be used if the touch key/ switch is pressed.

The pictures can be used with the [Bitmap commands](#).^[26]

You can use the [Compiler Functions](#)^[6] PICTURE_W and PICTURE_H to get the outline in pixels of the picture.

(see How-to-use example [BMP file - BEGINNER](#)^[56])

4.9 SystemMacros

POWERONMACRO :

All commands defined in this macro will be automatically executed when the power supply is switched on.

RESETMACRO :

All commands defined in this macro will be automatically executed when an external reset on Pin 5 is done.

WATCHDOGMACRO :

All commands defined in this macro will be automatically executed when the display hangs up.

BROWNOUTMACRO :

All commands defined in this macro will be automatically executed when VDD brakes down to 4,3V or lower.

4.10 ExportMacro

```
EXPORTMACRO: n1 [,"chartyp"] [,<filename>]
n1=0: no export
n1=1: export all following Macros as a include-File *.h for C;
n1=2: export all following Macros as a binary-File *.bin;
n1=3: export both a include-File *.h and a binary-File *.bin;
"chartyp": optionally another variable type for thbyte-array (default is
"unsigned char")
<filename>: optionally another filename (default is
"macroname_macronumber")
```

Example:

```
ExportMacro: 1, "char flash"

Macro: 5
#TA

#ZF FONT4x6
#ZL 4,10, "Font4x6 0123456789"
#ZF FONT6x8
#ZL 4,20, "Font6x8 Schriftprobe"
#ZF FONT7x12
#ZL 4,30, "Font7x12: Schrift"
```

Output in Logfile "Macro_5.h":

```
/* Macro 5 as include */
#define MACRO_5_LEN 88
char flash MACRO_5[MACRO_5_LEN] =
{
    27, 84, 65, 27, 90, 70, 1, 27, 90, 76, 4, 10, 70,111,110,116, 52,120, 54, 32,
    48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 0, 27, 90, 70, 2, 27, 90, 76, 4, 20,
    70,111,110,116, 54,120, 56, 32, 83, 99,104,114,105,102,116,112,114,111, 98,101,
    0, 27, 90, 70, 3, 27, 90, 76, 4, 30, 70,111,110,116, 55,120, 49, 50, 58, 32,
    83, 99,104,114,105,102,116, 0
};
```

4.11 Macro

MACRO: nr

Defines a normal macro with number nr (0..255). This macro will be executed with the command [#MN nr](#)^[29]

A series of macros occurring one after the other can be called cyclically (movie, hourglass, multi-page help text) see command for [Automatic \(normal-\) macros](#)^[29].

These automatic macros continue to be processed until either a command is received via the interface or a touch macro with a corresponding return code is activated.

These macros are also called by macro processes at defined intervals (see command for [Macro processes](#)^[29]). Macro processes are not interrupted when commands are received from the interface or when touch macros are triggered.

(see How-to-use example [Automatic Macro - BEGINNER](#)^[79])

4.12 TouchMacro

`TOUCHMACRO: nr`

Defines a touch macro with number nr (0..255). This macro will be executed if a touch key / switch with the return code nr is defined and the touch key/switch is pressed or by command `#MT nr`^[29].

(see How-to-use example [3 simple touch buttons - BEGINNER](#)^[57])

4.13 MenuMacro

`MENUMACRO: nr`

Defines a menu macro with number nr (0..255). This macro will be executed automatically after choosing an menu entry or by command `#MMnr`^[29].

(see How-to-use example [Menue - BEGINNER](#)^[76])

5 EA eDIP240-7 commands

5.1 Terminal

Terminal commands:

Position cursor	#TP n1,n2	n1=column; n2=line; origin upper-left corner (1,1)
Cursor on/off	#TC n1	n1=0: Cursor is invisible; n1=1: Cursor flashes;
Save cursor position	#TS	The current cursor position is saved
Restore cursor position	#TR	The last saved cursor position is restored
Terminal off	#TA	Terminal display is switched off; outputs are rejected
Terminal on	#TE	Terminal display is switched on

Terminal output:

String for terminal	#ZT "text..."	Command for outputting a string (text...) from a macro to the terminal
Output version	#TV	The version no. is output in the terminal e.g. "EA eDIP240-7 V1.0 Rev.A"

Special ASCII-characters:

Form feed	FF (dec:12)	The contents of the screen are deleted and the cursor is placed at pos. (1,1)
Carriage return	CR (dec:13)	Cursor to the beginning of the line on the extreme left
Line feed	LF (dec:10)	Cursor 1 line lower, if cursor in last line then scroll

5.2 Text

Text settings:

Set font	#ZF n1	Set font with the number nr = 0..15 (see compiler option FONT ^[10] : or WINFONT ^[11] :)
Font zoom factor	#ZZ n1,n2	n1 = X-zoom factor (1x to 4x); n2 = Y-zoom factor (1x to 4x)
Additional line spacing	#ZY n1	Insert n1=0..15 dots between two lines as additional spacing
Text angle	#ZW n1	Text output angle n1=0: 0°; n1=1: 90°
Text link mode	#ZV n1	n1: 1=set; 2=delete; 3=inverse; 4=replace; 5=inverse replace (see link modes ^[43])
Text flashing attribute	#ZB n1	n1: 0=no flashing; 1=Text flashing on/off; 2=Text flashes inversely

(see How-to-use example [Text linking - EXPERT](#)^[54])

Text output:

Output string left justified	#ZL x,y,"text..."	A string (text...) is output left justified to x,y. Several lines are separated by the character ' ' (\$7C, pipe). Text between two '~' (\$7E) characters flashes on/off. Text between two '@' (\$40) characters flashes inversely. The character '\' (\$5C, backslash) cancels the special function of ' ', '~', '@' and '\'
Output string centered	#ZC x,y,"text..."	A string (text...) is output centered to x,y. Several lines are separated by the character ' ' (\$7C, pipe). Text between two '~' (\$7E) characters flashes on/off. Text between two '@' (\$40) characters flashes inversely. The character '\' (\$5C, backslash) cancels the special function of ' ', '~', '@' and '\'
Output string right justified	#ZR x,y,"text..."	A string (text...) is output right justified to x,y. Several lines are separated by the character ' ' (\$7C, pipe). Text between two '~' (\$7E) characters flashes on/off. Text between two '@' (\$40) characters flashes inversely. The character '\' (\$5C, backslash) cancels the special function of ' ', '~', '@' and '\'
String for terminal	#ZT "text..."	Command for outputting a string (text...) from a macro to the terminal

(see How-to-use example [Place Strings - BEGINNER](#)^[52])

5.3 Display

Display commands (effect on the entire display):

Delete display	#DL	Delete display contents (all pixels off)
Fill display	#DS	Fill display contents (all pixels on)
Invert display	#DI	Invert display contents (invert all pixels)
Switch display off	#DA	Display contents become invisible but are retained, commands are still possible
Switch display on	#DE	Display contents become visible again
Show clip-board	#DC	Show content of clip-board Standard display output is no longer visible
Show current	#DN	Switch back to normal operation Standard display output is visible

(see How-to-use example [Clipboard - EXPERT](#) ⁶⁸⁷)

5.4 Draw

Draw straight lines and points:

Draw rectangle	#GR x1,y1,x2,y2	Draw four straight lines as a rectangle from x1,y1 to x2,y2
Draw straight line	#GD x1,y1,x2,y2	Draw straight line from x1,y1 to x2,y2
Continue straight line	#GW x1,y1	Draw a straight line from last end point to x1,y1
Draw point	#GP x1,y1	Set a point at coordinates x1,y1
Link mode	#GV n1	Set drawing mode n1: 1=set; 2=delete; 3=inverse; (see link modes ^[45])
Point size/line thickness	#GZ n1,n2	n1=X-point size (1 to 15); n2=Y-point size (1 to 15)

(see How-to-use example [GrafikModes - EXPERT](#)^[63])

Change/draw rectangular areas:

Delete area	#RL x1,y1,x2,y2	Delete an area from x1,y1 to x2,y2 (all pixels off)
Fill area	#RS x1,y1,x2,y2	Fill an area from x1,y1 to x2,y2 (all pixels on)
Invert area	#RI x1,y1,x2,y2	Invert an area from x1,y1 to x2,y2 (invert all pixels)
Area with fill pattern	#RM x1,y1,x2,y2,no	Draw area from x1,y1 to x2,y2 with pattern no (always set, see internal pattern ^[43])
Draw box	#RO x1,y1,x2,y2,no	Draw rectangle from x1,y1 to x2,y2 with pattern no (always replace, see internal pattern ^[43])
Draw frame	#RR x1,y1,x2,y2,no	Draw frame of type n1 from x1,y1 to x2,y2 (always set, see internal border ^[44])
Draw frame box	#RT x1,y1,x2,y2,no	Draw frame box of type n1 from x1,y1 to x2,y2 (always replace, see internal border ^[44])

(see How-to-use example [Frame - BEGINNER](#)^[67])

5.5 Flashing

Flashing areas:

Delete flashing attribute	#QL x1,y1,x2,y2	Delete the flashing attribute from x1,y1 to x2,y2
Flashing inversely	#QI x1,y1,x2,y2	Define an inverted flashing area from x1,y1 to x2,y2
Flashing area pattern	#QM x1,y1,x2,y2,n1	Define a flashing area (on/off) with pattern n1 from x1,y1 to x2,y2 (see internal pattern ^[43])
Set flashing time	#QZ n1	Set the flashing time n1=1..15 in 1/10sec; 0=deactivate flashing

5.6 Bitmap

Bitmap settings:

Image zoom factor	#UZ n1,n2	n1 = X-zoom factor (1x to 4x) n2 = Y-zoom factor (1x to 4x)
Image angle	#UW n1	output angle of the image n1=0: 0°; n1=1: 90°
Image link mode	#UV n1	n1: 1=set; 2=delete; 3=inverse; 4=replace; 5=inverse replace; (see link modes [48])
Image flashing attribute	#UB n1	n1: 0=no flashing; 1=image flashing on/off; n1: 2=image flashing inversely

(see How-to-use example [GrafikModes - EXPERT](#) [63])

Output bitmaps:

Image from clipboard	#UC x1,y1	The current contents of the clipboard are loaded to x1,y1 with all the image attributes
Load internal image	#UI x1,y1,nr	Load internal image with the no (0 to 255) from the EEPROM memory to x1,y1 (see compiler option PICTURE [13] :)
Load image	#UL x1,y1,data...	Load an image to x1,y1; data... = image in BLH-format [48] This command is only for serial interface, do not use this command in a macro !

(see How-to-use example [BMP file - BEGINNER](#) [56])

Hardcopy:

Send hardcopy	#UH x1,y1,x2,y2	After this command, the image extract is sent in BLH-format [48]
---------------	-----------------	----------------------------------------------------------------------------------

5.7 Clipboard

Clipboard:

Save display contents	#CB	The entire contents of the display are copied to the clipboard as an image area
Save area	#CS x1,y1,x2,y2	The image area from x1,y1 to x2,y2 is copied to the clipboard
Restore area	#CR	The image area on the clipboard is copied back to the display
Copy area	#CK x1,y1	The image area on the clipboard is copied to x1,y1 in the display

(see How-to-use example [Free draw area with clipboard - BEGINNER](#) ^[62])

(see How-to-use example [Clipboard - EXPERT](#) ^[63])

5.8 Bargraph

Define bargraphs:

Define bargraph	#BR #BL #BO #BU no,x1,y1,x2,y2, sv,ev,type,pat	Define bargraph with number no=1..32 to L(ef), R(ight), O(up), U(down) x1,y1,x2,y2 form the rectangle enclosing the bar graph. sv, ev are the values for 0% and 100% type: 0=pattern bar; pat=bar pattern type: 1=pattern bar in rectangle; pat=bar pattern type: 2=pattern line; pat=line width type: 3=pattern line in rectangle; pat=line width (see internal pattern ^[43])
-----------------	---------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

(see How-to-use example [Bargraph by touch - BEGINNER](#)^[73])

Use bargraphs:

Update bargraph	#BA no,value	Set and draw the bargraph no to the new value
Draw bargraph new	#BZ no	Entirely redraw the bargraph with the number no
Send bargraph value	#BS no	Send the current value of bargraph number no
Delete bargraph	#BD no,n2	The definition of the bar graph with the number no becomes invalid. If the bar graph was defined as input with touch, this touch field will also be deleted. n2=0: Bar graph remains visible; n2=1: Bar graph is deleted

5.9 Macros

Run macros:

Run macro	#MN nr	Call the (normal) macro with the number nr (max. 7 levels) (see compiler option MACRO^[18] :)
Run touch macros	#MT nr	Call the touch macro with the number nr (max. 7 levels) (see compiler option TOUCHMACRO^[19] :)
Run menu macro	#MM nr	Call the menu macro with the number nr (max. 7 levels) (see compiler option MENUMACRO^[20] :)

Automatic (normal-) macros:

Macro with delay	#MG n1,n2	Call the (normal) macro with the number n1 in n2/10s Execution is stopped by commands (e.g. receipt or touch macros).
Autom. macros once only	#ME n1,n2,n3	Automatically run macros n1 to n2 once only; n3=pause in 1/10s Execution is stopped by commands (e.g. receipt or touch macros).
Autom. macros cyclical	#MA n1,n2,n3	Automatically run macros n1 to n2 cyclically; n3=pause in 1/10s Execution is stopped by commands (e.g. receipt or touch macros).
Autom. macros ping pong	#MJ n1,n2,n3	Automatically run macros n1 to n2 to n1 (ping pong); n3=pause in 1/10s Execution is stopped, for example, by receipt or touch macros

(see How-to-use example [Automatic Macro - BEGINNER^{\[79\]}](#))

Macro processes:

Define macro process	#MD no,type,n3,n4,zs	A macro process with the number no (1 to 4) is defined (1=highest priority). The macros n3 to n4 are run successively every zs/10s. type: 1=once only; 2=cyclical; 3=ping pong n3 to n4 to n3
Macro process interval	#MZ no,zs	a new time zs in 1/10s is assigned to the macro process with the number no (1 to 4). if the time zs=0, execution is stopped.
Stop macro processes	#MS n1	All macro processes are stopped with n1=0 and restarted with n1=1 in order, for example, to execute settings and outputs via the interface undisturbed

5.10 Touch

Touch presets:

Touch border form	#AE nr	Set the border n1 for the display of touch keys/switches (see internal border ^[44])
Radio group for switches	#AR n1	n1=0: newly defined switches do not belong to a group n1=1..255: newly defined switches belong to the group with the number n1. Only one switch in a group is active at any one time; all the others are deactivated. In the case of a switch in a group, only the down code is applicable. the up code is ignored.

(see How-to-use example [Radio group - BEGINNER](#) ^[59])

Label font presets:

Label font	#AF nr	Set font with the number n1 (0 to 15) for touch key label (see compiler option FONT ^[10] : or WINFONT ^[11] :)
Label zoom factor	#AZ n1,n2	n1=X-zoom factor (1x to 4x); n2=Y-zoom factor (1x to 4x)
Additional line spacing	#AY n1	Insert n1=0..15 dots between two lines as additional spacing
Label angle	#AW n1	Label output angle: n1=0: 0°; n1=1: 90°

Define touch key/switch:

Define touch key	#AT x1,y1,x2,y2, downCode,upCode,"text.." #AU x,y, n1, downCode,upCode, "text.."	key remains depressed as long as there is contact
Define touch switch	#AK x1,y1,x2,y2, downCode,upCode,"text.." #AJ x,y, n1, downCode,upCode, "text.."	status of the switch toggles after each contact

#AT: The area from x1,y1 to x2,y2 is drawn with actual border and defined as a key
 #AK: The area from x1,y1 to x2,y2 is drawn with actual border and defined as a switch
 #AU: Image number n1 is loaded to x,y and defined as a key
 #AJ: Image number n1 is loaded to x,y and defined as a switch
 'downCode':(1-255) return/touchmacro when key pressed
 'upCode': (1-255) return/touchmacro when key released
 (downCode/upCode = 0 press/release not reported).
 "text..": this is a string that is placed in the key with the current touch font.
 The first character determines the alignment of the text (C=centered, L=left justified, R=right justified)
 This is followed by a string "text.." that is placed in the key with the current touch font
 Multiline texts are separated with the character '|' (\$7C, dec: 124)

(see How-to-use example [3 simple touch buttons - BEGINNER](#) ^[57])

Define touch menu:

Define touch key with menu function	#AM x1,y1,x2,y2, downCode,upCode,mnuCode, "text.."
<p>The area from x1,y1 to x2,y2 is defined as a menu key. 'down code':(1-255) return/touchmacro when pressed. 'up Code':(1-255) return/touchmacro when menu canceled 'mnu Code':(1-255) return/menumacro+(item number - 1) after selection of a menu item (down/up code = 0: activation/cancellation is not reported.) 'text':= string with the key text and the menu items. The first character determines the direction in which the menu opens (R=right,L=left,O=up,U=down) The second character determines the alignment of the touch text (C=center,L=left-,R=right justified) The menu items are separated by the character ' ' (\$7C,dec:124) (e.g. "UCkey item1 item2 item3"). The key text is written with the current touch font and the menu items are written with the current menu font. The background of the menu is saved automatically.</p>	

(see How-to-use example [Menue - BEGINNER](#) ^[73])

Define touch areas:

Define drawing area	#AD x1,y1,x2,y2, n1	A drawing area is defined. You can then draw with a line width of n1 within the corner coordinates x1,y1 and x2,y2.
Define free touch area	#AH x1,y1,x2,y2	A freely usable touch area is defined. Touch actions (down, up and drag) within the corner coordinates x1,y1 and x2,y2 are sent.
Set bar by touch	#AB n1	The bargraph with number n1 is defined for input by touch panel.

(see How-to-use example [Free draw area with clipboard - BEGINNER](#) ^[62])

(see How-to-use example [Bargraph by touch - BEGINNER](#) ^[73])

Global settings:

Touch query on/off	#AA n1	Touch query is n1=0: deactivated n1=1: activated
Touch key response	#AI n1	Automatic inversion when touch key touched n1=0: OFF n1=1: ON
Touch key response buzzer	#AS n1	Tone sounds briefly when a touch key is touched n1=0: OFF n1=1: ON
Send bar value on/off	#AQ n1	Automatic transmission of a new bar graph value by touch input n1=0: deactivated n1=1: is placed in the sendbuffer once at the end of input n1=2: changes are placed continuous into sendbuffer during input

Other touch functions:

Invert touch key	#AN code	The touch key with the assigned return code is inverted manually
Set touch switch	#AP code,n1	The status of the switch with the return code is changed to n1=0: OFF n1=1: ON
Query touch switch	#AX code	The status of the switch with the return code is placed in the sendbuffer (off=0; on=1)
Query radio group	#AG n1	down code of the activated switch from the radio group n1 is placed in the sendbuffer
Delete touch area by up- or down-code	#AL code, n1	The touch area with the return code is removed from the touch query (code=0: all touch areas). When n1=0, the area remains visible on the display When n1=1, the area is deleted
Delete touch area by coordinates	#AV x,y,n1	Remove the Touch area that includes the coordinates x1,y1 from the touch query. When n1=0, the area remains visible on the display When n1=1, the area is deleted

5.11 Menu

Settings for menu box/touch menu:

Set menu font	#NF n1	Set font with the number n1 (0 to 15) for menu display (see compiler option <code>FONT</code> ^[10] : or <code>WINFONT</code> ^[11] :)
Menu font zoom factor	#NZ n1,n2	n1=X-zoom factor (1x to 4x); n2=Y-zoom factor (1x to 4x)
Additional line spacing	#NY n1	Insert n1=0..15 dots between two menu items as additional spacing
Menu angle	#NW n1	Menu display angle: n1=0: 0°; n1=1: 90°
Touch menu automation	#NT n1	n1=1: Touch menu opens automatically n1=0: Touch menu does not open automatically; instead, the request 'ESC T 0' to open is sent to the host computer, which can then open the touch menu with 'ESC N T 2'

(see How-to-use example [Menue - BEGINNER](#)^[73])

Menu box commands (control with keys not by touch):

Define and display menu	#ND x,y,no,"text.."	A menu is drawn at corner x,y with the current menu font. no=currently inverted entry (e.g.: 1 = first entry). "text.. "=string with menu items, the different items are separated by the character ' ' (\$7C,dec:124) (e.g. "item1 item2 item3"). The background of the menu is saved automatically. If a menu is already defined, it is automatically canceled+deleted
Next item	#NN	The next item is inverted or remains at the end
Previous item	#NP	The previous item is inverted or remains at the beginning
End of menu/send	#NS	The menu is removed and replaced with the original background. The current item is sent as a number (1 to n) (0=no menu displayed)
End of menu/macro	#NM n1	The menu is removed and replaced with the original background. Menu macro n1 is called for item 1, menu macro nr+1 for item 2, and so on...
End of menu/cancel	#NA	The menu is removed and replaced with the original background

5.12 Other commands

Send functions:

Send bytes	#SB data...	bytes are sent to the sendbuffer data... can be numbers or strings e.g #SB "Test",10,13
Send version	#SV	The version is sent as a string to sendbuffer e.g. "EA eDIP240-7 V1.0 Rev.A TP+"
Send internal infos	#SI	Internal information about the eDIP is sent to the sendbuffer.

LED backlight:

Illumination on/off	#YL n1	LED illumination n1=0: OFF; n1=1: ON; n1=2 to 255: illumination switched on for n1 tenths of a second.
Illumination brightness	#YH n1	Set brightness of the LED illumination n1=0 to 100%. n1=254 switch LED off immediately n1=255 switch to 100% immediately

Output port:

Write output port	#YW n1,n2	n1=0: Set all output ports in accordance with n2 (=5/7-bit binary value). n1=1 to 5/7: Reset port n1 (n2=0); set (n2=1); invert (n2=2);
Tone on/off	#YS n1	The tone output (pin 16) becomes n1=0:OFF; n1=1:ON; n1=2 to 255:ON for n1/10s

(see How-to-use example [Outputs - BEGINNER](#)^[82])

Other functions:

Wait (pause)	#X n1	Wait n1/10sec before the next command is executed.
Set RS485 address	#KA adr	For RS232/RS485 operation only and only possible when Hardware address is 0. The eDIP is assigned a new address adr (in the Power-On macro). (see compile option RS485ADR ^[9]) (see example INIT_with_RS485_address.KMC ^[50])

6 Default Fonts

6.1 Terminal 8x8

+ Lower Upper	\$0 (0)	\$1 (1)	\$2 (2)	\$3 (3)	\$4 (4)	\$5 (5)	\$6 (6)	\$7 (7)	\$8 (8)	\$9 (9)	\$A (10)	\$B (11)	\$C (12)	\$D (13)	\$E (14)	\$F (15)
\$20 (dez: 32)		!	"	#	\$	%	&	'	()	*	+	,	-	.	/
\$30 (dez: 48)	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
\$40 (dez: 64)	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
\$50 (dez: 80)	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
\$60 (dez: 96)	~	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
\$70 (dez: 112)	p	q	r	s	t	u	v	w	x	y	z	{		}	~	Δ
\$80 (dez: 128)	€	ü	é	â	ä	à	ç	ê	ë	è	ï	î	ì	ä	å	
\$90 (dez: 144)	É	æ	Æ	ô	ö	ò	û	ù	ÿ	ö	ü	ç	£	¥	β	f
\$A0 (dez: 160)	á	í	ó	ú	ñ	ñ	ø	ø	¿	¡	½	¼	i	«	»	
\$B0 (dez: 176)																
\$C0 (dez: 192)																
\$D0 (dez: 208)																
\$E0 (dez: 224)	α	β	Γ	π	Σ	σ	μ	τ	ϕ	θ	η	δ	φ	Ε	Π	
\$F0 (dez: 240)	≡	±	≥	≤	ρ	∫	÷	≈	°	*	.	√	n	z	z	—

6.2 Font 4x6

+ Lower Upper	\$0 (0)	\$1 (1)	\$2 (2)	\$3 (3)	\$4 (4)	\$5 (5)	\$6 (6)	\$7 (7)	\$8 (8)	\$9 (9)	\$A (10)	\$B (11)	\$C (12)	\$D (13)	\$E (14)	\$F (15)
\$20 (dez: 32)		!	"	#	\$	%	&	'	()	*	+	,	-	.	/
\$30 (dez: 48)	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
\$40 (dez: 64)	Q	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
\$50 (dez: 80)	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
\$60 (dez: 96)	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
\$70 (dez: 112)	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
\$80 (dez: 128)																
\$90 (dez: 144)																

6.3 Font 6x8

+ Lower Upper	\$0 (0)	\$1 (1)	\$2 (2)	\$3 (3)	\$4 (4)	\$5 (5)	\$6 (6)	\$7 (7)	\$8 (8)	\$9 (9)	\$A (10)	\$B (11)	\$C (12)	\$D (13)	\$E (14)	\$F (15)
\$20 (dez: 32)		!	"	#	\$	%	&	'	()	*	+	,	-	.	/
\$30 (dez: 48)	Ø	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
\$40 (dez: 64)	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
\$50 (dez: 80)	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
\$60 (dez: 96)	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
\$70 (dez: 112)	p	q	r	s	t	u	v	w	x	y	z	{		}	~	ð
\$80 (dez: 128)	é	ü	é	ā	ä	ā	ā	ç	ē	ë	ë	ï	ï	ï	ÿ	À
\$90 (dez: 144)	É	æ	Æ	ö	ö	ö	Ü	ü	ö	Ü	†	‡	£	¥	β	f
\$A0 (dez: 160)	á	í	ó	ú	ñ	Ñ	º	º	¿	¬	¬	½	¼	ı	«	»
\$B0 (dez: 176)																
\$C0 (dez: 192)																
\$D0 (dez: 208)																
\$E0 (dez: 224)	α	β	Γ	Π	Σ	σ	μ	τ	ϖ	ϑ	Ω	δ	ø	ø	Ε	Π
\$F0 (dez: 240)	≡	±	≥	≤	Γ	∫	÷	∞	•	•	•	√	∩	∩	∩	—

6.4 Font 7x12

+ Lower Upper	\$0 (0)	\$1 (1)	\$2 (2)	\$3 (3)	\$4 (4)	\$5 (5)	\$6 (6)	\$7 (7)	\$8 (8)	\$9 (9)	\$A (10)	\$B (11)	\$C (12)	\$D (13)	\$E (14)	\$F (15)
\$20 (dez: 32)		!	"	#	\$	%	&	'	()	*	+	,	-	.	/
\$30 (dez: 48)	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
\$40 (dez: 64)	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
\$50 (dez: 80)	'	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
\$60 (dez: 96)	p	q	r	s	t	u	v	w	x	y	z	{		}	~	Δ
\$70 (dez: 112)	€	ü	é	â	ä	à	ç	ê	ë	è	ï	î	ï	ñ	ñ	
\$80 (dez: 128)	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	¢	£	¥	ß	f
\$90 (dez: 144)	á	í	ó	ú	ñ	ñ	ª	º	¿	¬	½	¼	¡	«	»	
\$A0 (dez: 160)																
\$B0 (dez: 176)																
\$C0 (dez: 192)																
\$D0 (dez: 208)																
\$E0 (dez: 224)	α	β	Γ	π	Σ	σ	μ	τ	ϕ	θ	Ω	ε	φ	φ	ε	π
\$F0 (dez: 240)	≡	±	≥	≤	Γ	J	÷	≈	°	•	•	√	n	z	z	—

6.5 Geneva 10

+ Lower Upper	\$0 (0)	\$1 (1)	\$2 (2)	\$3 (3)	\$4 (4)	\$5 (5)	\$6 (6)	\$7 (7)	\$8 (8)	\$9 (9)	\$A (10)	\$B (11)	\$C (12)	\$D (13)	\$E (14)	\$F (15)
\$20 (dez. 32)		!	"	#	\$	%	&	'	()	*	+	,	-	.	/
\$30 (dez. 48)	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
\$40 (dez. 64)	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
\$50 (dez. 80)	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
\$60 (dez. 96)	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
\$70 (dez. 112)	p	q	r	s	t	u	v	w	x	y	z	{		}	~	Δ
\$80 (dez. 128)	É	ü	é	â	ä	à	â	ç	ê	ë	è	ï	î	ì	Ä	Å
\$90 (dez. 144)	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü					
\$A0 (dez. 160)	á	í	ó	ú	ñ	Ñ	ä	ö								
\$B0 (dez. 176)																
\$C0 (dez. 192)																
\$D0 (dez. 208)																
\$E0 (dez. 224)		ß														
\$F0 (dez. 240)									◦							

6.6 Chicago 14

+ Lower Upper	\$0 (0)	\$1 (1)	\$2 (2)	\$3 (3)	\$4 (4)	\$5 (5)	\$6 (6)	\$7 (7)	\$8 (8)	\$9 (9)	\$A (10)	\$B (11)	\$C (12)	\$D (13)	\$E (14)	\$F (15)
\$20 (dez: 32)		!	"	#	\$	%	&	'	()	*	+	,	-	.	/
\$30 (dez: 48)	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
\$40 (dez: 64)	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
\$50 (dez: 80)	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
\$60 (dez: 96)	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
\$70 (dez: 112)	p	q	r	s	t	u	v	w	x	y	z	{		}	~	Δ
\$80 (dez: 128)	€	ü	é	â	ä	à	ã	ç	ê	ë	è	ï	î	ì	Ä	Å
\$90 (dez: 144)	É	æ	Æ	ô	ö	ò	û	ù	ÿ	ö	Ü					
\$A0 (dez: 160)	á	í	ó	ú	ñ	Ñ	ä	o								
\$B0 (dez: 176)																
\$C0 (dez: 192)																
\$D0 (dez: 208)																
\$E0 (dez: 224)		ß														
\$F0 (dez: 240)									°							


6.8 BigZif 57

+ Lower Upper	\$0 (0)	\$1 (1)	\$2 (2)	\$3 (3)	\$4 (4)	\$5 (5)	\$6 (6)	\$7 (7)	\$8 (8)	\$9 (9)	\$A (10)	\$B (11)	\$C (12)	\$D (13)	\$E (14)	\$F (15)
\$20 (dez: 32)												+		-	.	
\$30 (dez: 48)	0	1	2	3	4	5	6	7	8	9	:					

7 Internal Pattern

The internal pattern can be used with any command that uses patterns


e.g `#RM,#RO`^[24], `#QM`^[25], `#BR,#BL,#BO,#BU`^[28]

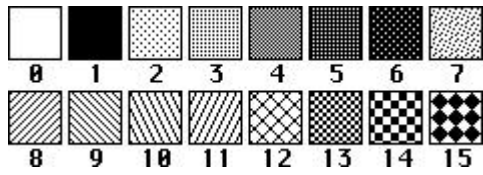

8 Internal Border

The internal border can be used with any command that uses borders


e.g [#RR,#RT](#)^[24], [#AE](#)^[30]

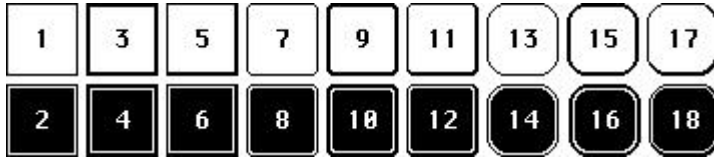


9 Link Modes

The Link Modes can be used with several commands
e.g `#ZV`^[22], `#GV`^[24], `#UV`^[26]


n1=1: set Pixel without regarding previous value (OR)

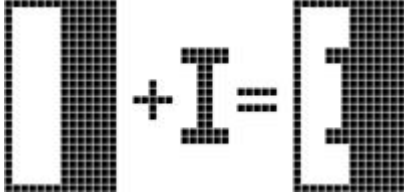


n1=2: delete Pixel without regarding previous value

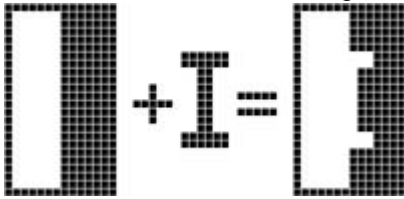


n1=3: invert Pixel (EXOR)

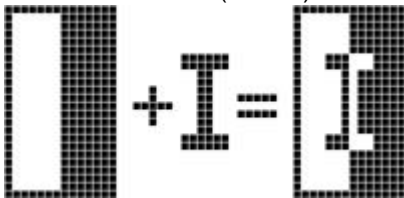

n1=4 replace: clear background and set Pixel

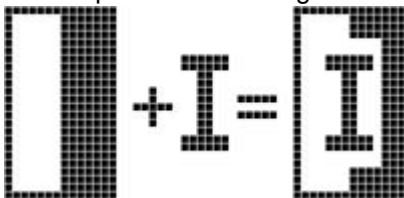

n1=5 invers replace: fill background and delete Pixel

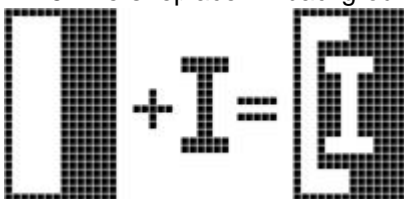

10 BLH format


Use 'BitmapEdit.exe' from the LCD-Tools package to edit/convert images into/from BLH-format.

Structure of an image file in the BLH-format:

description	number of bytes
image width	1
image height	1
image data	$((\text{width}+7) / 8) * \text{height}$ The image is stored from top to down One byte stands for 8 horizontal pixels on the screen (MSB: left, LSB: right; 0=white, 1=black)

Example:

a small icon with 12x12 dots

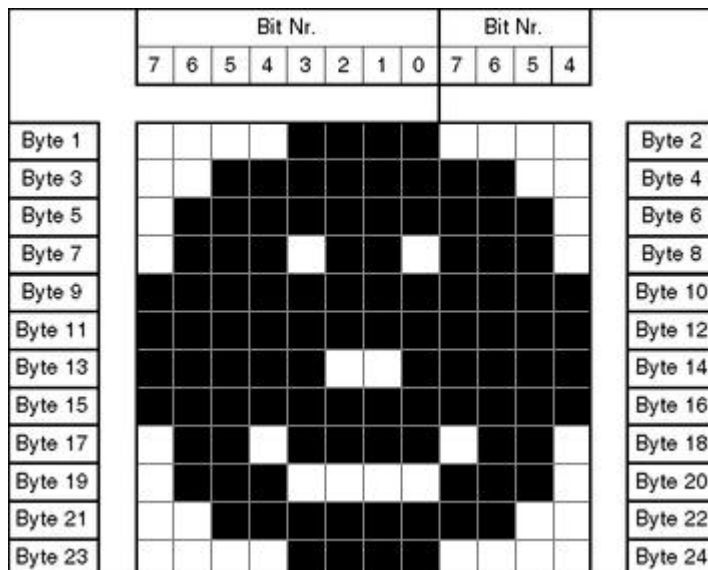

The complete BLH-file:

```
$0C $0C
$0F $00 $3F $C0 $7F $E0 $76 $E0 $FF $F0 $FF $F0
$F9 $F0 $FF $F0 $6F $60 $70 $E0 $3F $C0 $0F $00
```

11 How-to-use

To find an easy start, you will find a project under "..\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\My first project\my_first_project.KMC". In that example all main commands are used.

There are two different classes of examples. The ones starting with "BEGINNER.." are good to get an easy start. The ones starting with "EXPERT" describe special functions, such as using constants, definitions and compiler functions.



Folder:

\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\My first project

File:

my_first_project.kmc

Commands:

#AT, #BR, #ZL, #UI

Open file in KitEditor

```
eDIP240-7  "First project"
...
...
...
;
;-----
;Include picture
Picture: 6 , <..\..\BITMAPS\monochrome\TOTKOPF.bmp> ;store as picture 6 (1-5 are used in
"default_pictures.kmi"

;-----
;start of macro programming
;Normal Macros:

Macro: 0 ;define macro 0, called after power on, reset, watchdog reset
#TA          ; terminal off
#AF CHICAGO14 ; set touch label font, the font is defined in include file
"default_font.kmi"
#AT 10, 5,80,25,1,0, "Picture" ; place 3 touchbuttons at x1,y1 to x2,y2,
Touchmacro 1 is called
#AT 10,30,80,50,2,0, "String" ; touchmacro 2 is called
#AT 10,55,80,75,3,0, "Bargraph" ; touchmacro 3 is called

;Touch Macros:
TouchMacro: 1 ;Picture
#BD 1, 0 ; delete bargraph 1, because of touchmacro 3 ("Bargraph"), it
can stay visible,
#RL 81,0,239,127 ; because pixels are deleted with next command
touchmacros) ; delete area on the right (to delete pixels of other
#UI 120,15, 6 ;load internal picture 6

TouchMacro: 2 ;String
#BD 1, 0 ; delete bargraph 1, because of touchmacro 3 ("Bargraph"), it
can stay visible,
#RL 81,0,239,127 ; because pixels are deleted with next command
touchmacros) ; delete area on the right (to delete pixels of other
#ZF CHICAGO14 ;set font for strings (font is defined in "default_font.kmi")
#ZC 160,40, "Hello|World" ;write string centered, '|' means next line
```

```
TouchMacro: 3 ;Bargraph
#BD 1, 0 ; delete bargraph 1, because of touchmacro 3 ("Bargraph"), it
can stay visible, ; because pixels are deleted with next command
#RL 81,0,239,127 ; delete area on the right (to delete pixels of other
touchmacros)
#AQ 0 ; deactivate sending barvalues into sendbuffer
#BO 1,130,100,150,5,0,100,1,3 ; define bar 1 upwards, with statval 0 and endval
100, pattern 3
#BA 1,75 ; set bar 1 to new val of 75
#AB 1 ; set bar 1 with touch
```


11.1 Factory Setting

This macrofile sets the display back to factory setting.



Folder:
 \ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\Init\

File:
 Init.kmc

Commands:

Open file in KitEditor

```
eDIP240-7 "initialisierung / Auslieferung" ; define eDIP240-7, "Projectname" max. 30
character
;brings the display back to ex-works condition with it's standard-fonts 1..7, standard-
pictures

AutoScan: 1 ; autoscan for correct baud rate to connect to eDIP on
COM/USB

;COM1: 115200 ; program eDIP on COMx with 115200 Baud
USB: 115200, "eDIP Programmer" ; use EA 9777-USB eDIP Programmer and program eDIP
with 115200 baud

;VERIFY ; verify after program

Simulation ; simulate eDIP240-7 on PC

;-----
; load defaults

include <..\default_constant.kmi> ; double click to open
include <..\default_font.kmi>
include <..\default_pictures.kmi>

;-----

MnAutoStart = 0

PowerOnMacro: ; runs after power-on
#MN MnAutoStart

ResetMacro: ; runs after external reset
#MN MnAutoStart

WatchdogMacro: ; runs after a crash (>1000ms)
#MN MnAutoStart

BrownOutMacro: ; runs when supply voltage drops <3V
#MN MnAutoStart

;-----

Macro: MnAutoStart
```

11.2 RS485 - Factory Setting

This macrofile uses RS485 addressing and sets the display back to factory setting.



Folder:

\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\Init\

File:

INIT_with_RS485_address.KMC

Commands:

Open file in KitEditor

```
eDIP240-7 "initialisierung / Auslieferung" ; define eDIP240-7, "Projectname" max. 30
character
;brings the display back to ex-works condition with it's standard-fonts 1..7, standard-
pictures

AutoScan: 1 ; autoscan for correct baud rate to connect to eDIP on
COM/USB

;COM1: 115200 ; program eDIP on COMx with 115200 Baud
USB: 115200, "eDIP Programmer" ; use EA 9777-USB eDIP Programmer and program eDIP
with 115200 baud

;VERIFY ; verify after program

Simulation ; simulate eDIP240-7 on PC

progadr = 0 ; Constant for program address
RS485ADR: progadr ; program only eDIP with address xx (possible addresses: 0..255)

;newadr = 10 ; Constant for new software address, see Makro 0 (#KA newadr)
; (software adres only possible for hardware address 0)
newadr = progadr ; do not change the address

;-----
; load defaults

include <..\default_constant.kmi> ; double click to open
include <..\default_font.kmi>
include <..\default_pictures.kmi>

;-----

MnAutoStart = 0

PowerOnMacro: ; runs after power-on
#MN MnAutoStart

ResetMacro: ; runs after external reset
#MN MnAutoStart

WatchdogMacro: ; runs after a crash (>1000ms)
#MN MnAutoStart

BrownOutMacro: ; runs when supply voltage drops <3V
```

```
#MN MnAutoStart
```

```
;------
```

```
Macro: MnAutoStart  
#KA newadr
```

curly brackets to open EditText for fonts
characters
for EditText to see the characters correctly
Fontname and "Select Font for EditText"

; use mouse to select
; You have to select Font no.9
; by clicking right on the


```
#RS xs,y,xe,y+yh      ; fill area (all pixels on)
y+=yh+pitch
#RS xs,y,xe,y+yh      ; fill area (all pixels on)
y+=yh+pitch
#RS xs,y,xe,y+yh      ; fill area (all pixels on)

;--- Place information ---
#ZF GENEVA10           ; use font Geneva 10
                        ; same as #ZF 4 (see default_font line 10)
#ZZ 1,1               ; set font zoom factor to 1(x-axes), 1(y-axes) (default)
#ZC 20, 45, "Set"      ; place text
#ZC 65, 45, "Delete"   ; place text
#ZC 110,45, "Invers"   ; place text
#ZC 160,45, "Replace"  ; place text
#ZC 210, 40, "Inverse|Replace" ; place text

;--- Text link modes ---
#ZF ARIAL             ; set text font (Arial see line 42)
#ZV 1                 ; text link mode: 1 = set
#ZC 20, 68, "8"       ; place text in the box
#ZV 2                 ; text link mode: 2 = delete
#ZC 65,68, "8"        ; place text in the box
#ZV 3                 ; text link mode: 3 = inverse
#ZC 110,68, "8"       ; place text in the box
#ZV 4                 ; text link mode: 4 = replace
#ZC 160,68, "8"       ; place text in the box
#ZV 5                 ; text link mode: 5 = inverse replace
#ZR 235,68, "8"       ; place text in the box
```


11.6 3 simple touch buttons - BEGINNER

Explanation of general use of TouchButtons and TouchMacros. There are further examples available, containing information about Bargraph (see [BEGINNER - bargraph_by_touch.kmc](#)^[73]), Radiogroups (see [BEGINNER - radiogroup.kmc](#)^[58]) and another Example with touch buttons (see [EXPERT - keypad.kmc](#)^[60])



Folder:

\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\How to use\Touch\

File:

BEGINNER – 3 simple buttons.kmc

Commands:

#AU, #AT

Open file in KitEditor

```
eDIP240-7    "3 simple buttons"
...
...
...
;-----
;include Pictures
Path: <..\..\..\Bitmaps\monochrome>
Picture: 6 <howtouselogol.bmp>
Picture: 7 <Button\Lamp34x34_1.bmp>,<Button\Lamp34x34_0.bmp>

;-----

Macro: MnAutoStart
;--- Place ELECTRONIC ASSEMBLY logo ---
    #TA                ; Terminal off
    #UI 75,0,6         ; place logo

;---- Place the left touch ----
    #AE 14             ; set Frame style no. 14
    #AF 6              ; set font no. 6 for Touch area
    #AT 15,50,49,84,65,0 "CA" ;draw Touch area - this will put a $41 (65 dec.) into
send buffer
                                ; the first "C" means left center aligned

;---- Place the middle touch as a bitmap ----
    #AF 6              ; set font no. 6for Touch area
    #AJ 103,50,7,1,2 "" ; draw Touch area - as bitmap in this example without
text
                                ; touch area is a switch

;---- Place the right touch as a bitmap ----
    #AF 6              ; set font no. 6for Touch area
    #AT 191,50,225,84,67,68 "RC" ; draw Touch area - this will run TouchMacro 67
(button down) and
                                ; afterwards TouchMacro 68 (button up)
                                ; the first "R" means righth justify text

;---- Touch Macro for the middle touch (set) ----
TouchMacro: 1
    #YL 0              ;Backlight off

;---- Reset the middle touch ----
TouchMacro: 2
```

```
#YL 1 ; Backlight on

;---- Touch Macro for the right touch ----
TouchMacro: 67
#ZF GENEVA10
#ZC 120,100, "#Macro 67, Button C pressed"

;---- Release the right touch ----
TouchMacro: 68
#RL 0,90,240,120 ; delete area
```

11.7 Radio group - BEGINNER

Explanation of general use of TouchButtons and TouchMacros. There are further examples available, containing information about Bargraph (see [BEGINNER - bargraph by touch.kmc](#)^[73]), Buttons (see [BEGINNER - 3 simple buttons.kmc](#)^[57]) and another Example with touch buttons (see [EXPERT - keypad.kmc](#)^[60])


Folder:

\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\How to use\Touch\

File:

BEGINNER - touch as radio button.kmc

Commands:

#AR, #AJ

Open file in KitEditor

```
eDIP240-7    "Radiogroup"
...
...
...
;-----
;include Pictures
Path: <..\..\..\Bitmaps\monochrome>
Picture: 6 <howtouselogol.bmp>
;-----

Macro: MnAutoStart
;--- Place ELECTRONIC ASSEMBLY logo ---
    #TA                ; Terminal off
    #UI 75,0,6         ; place logo

;---- Place radiobuttons ----
    #AR 1              ; define radiogroup
    #AF GENEVA10       ; define next buttons as radiogroup 1
    #AJ 10, 40, 1, 1,0,"RButton 1" ; place radiobutton 1 with picture radiobutton
and downcode 1, 'R'= right aligned
    #AJ 10, 70, 1, 2,0,"RButton 2" ; place radiobutton 1 with picture radiobutton
and downcode 2, 'R'= right aligned
    #AJ 10, 100,1, 3,0,"RButton 3" ; place radiobutton 1 with picture radiobutton
and downcode 3, 'R'= right aligned
    #AR 0              ; next buttons do not belong to any radiogroup
    #AP 1,1           ; activate radiobutton 1
    #MT 1             ; call Touchmacro from radiobutton 1

;-----
TouchMacro: 1
    #ZF CHICAGO14     ; use textfont no. 5
    #ZL 120,55,"Radiobutton 1|is selcted" ; '|' means next line
TouchMacro: 2
    #ZF CHICAGO14     ; use textfont no. 5
    #ZL 120,55,"Radiobutton 2|is selcted"
TouchMacro: 3
    #ZF CHICAGO14     ; use textfont no. 5
    #ZL 120,55,"Radiobutton 3|is selcted"
```

11.8 Keypad - EXPERT

Place a keypad (0..9). There are further examples available, containing information about Bargraph (see [BEGINNER - bargraph_by_touch.kmc](#)^[73]), Buttons (see [BEGINNER - 3 simple buttons.kmc](#)^[57]) and Radio groups (see [BEGINNER - radiogroup.kmc](#)^[59]).


Folder:

\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\How to use\Touch\

File:

EXPERT – keypad.kmc

Commands:

#AT

Open file in KitEditor

```
eDIP240-7    "Keypad"
...
...
...
;-----
;include Pictures
Path: <..\..\..\Bitmaps\monochrome>
LOGO = 6 ; using constants makes it easier
Picture: LOGO <howtouselogo1.bmp>

;-----
;define constants for touchmacros
Mn1 = 1
Mn2 = Mn1+1
Mn3 = Mn2+1
Mn4 = Mn3+1
Mn5 = Mn4+1
Mn6 = Mn5+1
Mn7 = Mn6+1
Mn8 = Mn7+1
Mn9 = Mn8+1
Mn10= Mn9+1

;-----

Macro: MnAutoStart
;--- Place ELECTRONIC ASSEMBLY logo ---
    #TA                                ; Terminal off
pic_x = 30
pic_y = 0
;    #UI pic_x, pic_y, LOGO
;    #UI (XPIXEL-PICTURE_W(LOGO))/2,0,LOGO                ; place logo

;--- Place Keypad ---
    #AF CHICAGO14                        ; define font for touchbuttons
;define some constants to place buttons easily
pitch = 5 ; distance between buttons
xw = 25 ; x-width of buttons
xe = XMAX ; end of keypad
xs = xe-3*xw-2*pitch ; calculated x-width
yh = xw
ye=YMAX
ys=ye-4*yh-3*pitch
x=xs
y=ys
```

```

        #AT x, y, x+xw,y+yh, Mn1, 0, "1"
x+=xw+pitch
        #AT x, y, x+xw,y+yh, Mn2, 0, "2"
x+=xw+pitch
        #AT x, y, x+xw,y+yh, Mn3, 0, "3"
x=xs
y+=yh+pitch
        #AT x, y, x+xw,y+yh, Mn4, 0, "4"
x+=xw+pitch
        #AT x, y, x+xw,y+yh, Mn5, 0, "5"
x+=xw+pitch
        #AT x, y, x+xw,y+yh, Mn6, 0, "6"
x=xs
y+=yh+pitch
        #AT x, y, x+xw,y+yh, Mn7, 0, "7"
x+=xw+pitch
        #AT x, y, x+xw,y+yh, Mn8, 0, "8"
x+=xw+pitch
        #AT x, y, x+xw,y+yh, Mn9, 0, "9"
x=xs
y+=yh+pitch
;        #AT x, y, x+xw,y+yh, 0, 0, ""
x+=xw+pitch
        #AT x, y, x+xw,y+yh, Mn10, 0, "0"
x+=xw+pitch
;        #AT x, y, x+xw,y+yh, 0, 0, ""

;define Fonts for Touchmacros (because using the same in all touchmacros
#ZF BIGZIF57          ; define Font

;-----
;Show the numbers which are pressed
x=pic_x+PICTURE_W(LOGO)/2 ; calculate middle of logo and write number center aligned
beneath it
y=45
TouchMacro: Mn1
#ZC x,y, "1" ; write number
TouchMacro: Mn2
#ZC x,y, "2" ; write number
TouchMacro: Mn3
#ZC x,y, "3" ; write number
TouchMacro: Mn4
#ZC x,y, "4" ; write number
TouchMacro: Mn5
#ZC x,y, "5" ; write number
TouchMacro: Mn6
#ZC x,y, "6" ; write number
TouchMacro: Mn7
#ZC x,y, "7" ; write number
TouchMacro: Mn8
#ZC x,y, "8" ; write number
TouchMacro: Mn9
#ZC x,y, "9" ; write number
TouchMacro: Mn10
#ZC x,y, "0" ; write number

```

11.9 Free draw area with clipboard - BEGINNER

Define a free drawing area. In addition, the drawing area can be saved and recalled with the help of the clipboard. There is an EXPERT example available, too. Please have a look at [EXPERT – free draw area clipboard](#)^[63]



Folder:
 \ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\How to use\Draw\

File:
 BEGINNER – free_draw_area_clipboard.kmc

Commands:
 #AD

Open file in KitEditor

```
eDIP240-7 "Free drawing area with clipboard"
...
...
...
;-----
;include Pictures
Path: <..\..\..\Bitmaps\monochrome>
Picture: 6 <howtouselogol.bmp>
;-----

Macro: MnAutoStart
;--- Place ELECTRONIC ASSEMBLY logo ---
#TA ; Terminal off
#UI 75,0,6 ; place logo

;--- Place information ---
#ZF GENEVA10 ; set font no.4
#ZC 38, 35,"Drawing area:"

;---- Place buttons ----
#AF GENEVA10 ; set font no. 4 for Touch area
#AE 5
#AT 135,60,220,80,1,0, "Save and clear" ; place touchbutton 1
#AT 135,90,220,110,2,0, "CRecall" ; place touchbutton 2

;---- Place drawing area ----
#GR 10,50,100,115 ; place rectangle around drawing area
#AD 11,51,99,114,1 ; place drawing area, linewidth 1

;-----

TouchMacro: 1
#CS 11,51,99,114 ; drawing area is copied to the clipboard
#RL 11,51,99,114 ; clear drawing area

TouchMacro: 2
#CR ; copy clipboard back to the display
```

11.10 Free draw area with clipboard - EXPERT

Define a free drawing area. In addition, the drawing area can be saved and recalled with the help of the clipboard. There is a an BEGINNER example available, too. Please have a look at [BEGINNER – free draw area clipboard](#)^[62]



Folder:
 \ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\How to use\Draw\

File:
 EXPERT –
 free_draw_area_clipboard.kmc

Commands:
 #AD

Open file in KitEditor

```
eDIP240-7 "Free drawing area with clipboard"
...
...
...
;-----
;include Pictures
Path: <..\..\..\Bitmaps\monochrome>
LOGO = 6 ;using constants makes it easier
Picture: LOGO <howtouselogo1.bmp>

;-----
;define constants for toucmacos
SAVE = 1
RECALL = 2

;-----

Macro: MnAutoStart
;--- Place ELECTRONIC ASSEMBLY logo ---
#TA ; Terminal off
#UI (XPIXEL-PICTURE_W(LOGO))/2,0,LOGO ; place logo

d_xs=10 ;drawing box x_start
d_xb=120
d_ys=50
d_yh=70
;--- Place information ---
#ZF GENEVA10 ; set font no.4
#ZL d_xs, d_ys-15,"Drawing area:"
;---- Place buttons ----
#AF GENEVA10 ; set font no. 4 for Touch area
#AE 5
x=d_xs+d_xb+20
xb=XPIXEL-x-5
yh=20
pitch=5
y=(d_yh-2*yh-pitch)/2+d_ys ;calculate the start of buttons, to be in between the drawing
area
#AT x,y,x+xb,y+yh,SAVE,0, "Save and clear" ; place touchbutton 1
y+=yh+pitch
#AT x,y,x+xb,y+yh,RECALL,0, "CRecall" ; place touchbutton 2

;---- Place drawing area ----
#GR d_xs,d_ys,d_xs+d_xb,d_ys+d_yh ; place rectangle around drawing area
#AD d_xs+1,d_ys+1,d_xs+d_xb-1,d_ys+d_yh-1,1 ; place drawing area, linewidth 1
```

```
-----  
TouchMacro: SAVE  
#CS d_xs+1,d_ys+1,d_xs+d_xb-1,d_ys+d_yh-1 ; drawing area is copied to the  
clipboard  
#RL d_xs+1,d_ys+1,d_xs+d_xb-1,d_ys+d_yh-1 ; clear drawing area  
  
TouchMacro: RECALL  
#CR ; copy clipboard back to the display
```


11.11 Clipboard - EXPERT

Explain the use of clipboard.



Folder:

\\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\How to use\Clipboard\

File:

EXPERT - Clipboard.kmc

Commands:

#DO

Open file in KitEditor

```
eDIP240-7 "Using Clipboard"
...
...
...
;-----
;include Pictures
Path: <..\..\..\Bitmaps\monochrome>
LOGO = 6 ; using constants makes it easier to use
Picture: 6 <howtouselogo1.bmp>
;-----
;define constants for touchmacros
ST1 = 1
ST2 = ST1+1
ST3 = ST2+1
RES = 100
;-----
Macro: MnAutoStart
    #TA ;Terminal off

    ; define touchbuttons
    #AF CHICAGO14
xs = 180
xb = XPIXEL-xs
ys = 10
pitch = 5
yh = (YPIXEL-pitch*3-2*ys)/4
Y=ys
    #AT xs,y,xs+xb,y+yh,ST1,0,"Step 1"
y+=yh+pitch
    #AT xs,y,xs+xb,y+yh,ST2,0,"Step 2"
y+=yh+pitch
    #AT xs,y,xs+xb,y+yh,ST3,0,"Step 3"
y+=yh+pitch
    #AT xs,y,xs+xb,y+yh,RES,0,"CReset" ;C0center alligned, neccessary, because R is
used as right justified

TouchMacro: ST1 ; Step one, draw something
    #GD 0,50,10,67
    #GW 40,90
    #GW 60,120
    #GW xs-5, YMAX-5
;drawing lines finished
#CB ; save display contents
#DC ; show only clipboard (so you can't see inverting touchbuttons and
```

```
;changes on the display)
```

```
TouchMacro: ST2 ; step two, write a string on the screen  
                ; the string is not seen by user, because #DC of step 1.  
                ; Useful to show big pictures  
                #ZL 5,5,"This text is written|within Step 2"
```

```
TouchMacro: ST3 ; step three, show normal display content  
                #DN ;Normal operation
```

```
TouchMacro: RES  
                #DN ; normal operation of display  
                #RL 0,0,xs-1,YMAX ; clear drawing area
```

11.12 Frame - BEGINNER

Show the different borders.



Folder:

\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\How to use\Frame\

File:

BEGINNER – frame.kmc

Commands:

#RT, #RR

Open file in KitEditor

```
eDIP240-7 "Different Borders"
...
...
...
;-----
;include Pictures
Path: <..\..\..\Bitmaps\monochrome>
Picture: 6 <howtouselogol.bmp>
;-----

Macro: MnAutoStart

;--- Place ELECTRONIC ASSEMBLY logo ---
#TA                               ; Terminal off
#UI 75,0,6                         ; place logo

;--- Place 3 Buttons to select different Boarders ---
; use default paramters for Border, color and font of Touchbuttons
#AF GENEVA10                       ;use Geneva 10 as Touchbutton font
#AT 5, 35,50,50,1,0,"Border1"
#AT 5,60,50,75,2,0,"Border2"
#AT 5,85,50,100,3,0,"Border3"

#MT 1 ; run a TouchMacro to show something on the screen at startup

TouchMacro 1: ; Called by Button Border1
#MN 1                               ; call Macro 1 (delete area to draw new frames)
#RR 80,35,155,100,15                ; draw new frame with border no. 15

TouchMacro 2: ;Called by Button Border2
#MN 1
#AE 18                               ; set touchframe no. 18
#AT 80,50,170,70,4,0,"Border-Button" ; define button

TouchMacro 3: ;Called by Button Border3
#MN 1
#BR 1,80,50,170,70,0,100,1,5 ; define bargraph no. 1 with size, value and type
#AB 1                               ; define bargraph no. 1 to be adjusted by the
touch
#BA 1,75                             ; set bargraph no. 1 to value 75
#ZF GENEVA10                         ; switch textfont to Geneva 10 (same as #ZF 4)
#ZL 80,80,"Bargraph with|fill-pattern" ; place info-text
; '|' means new line
```

```
Macro 1: ; Draw Rectangel with selected Border
#RL 80,35,180,120 ; delete area, to draw
#AV 80,50,0 ; delete old touchareas (Bargraph and border button)

TouchMacro 4: ; called by Boder-Button
#ZF GENEVA10 ; switch textfont to Geneva 10 (same as
#ZF 4)
#ZL 80,80,"Border Button|was pressed" ; place text, that Border-Button was
touched ; '|' means new line
```

11.13 GrafikModes - EXPERT

Show different link modes and flashing modes.



Folder:

\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\How to use\GrafikMode\

File:

EXPERT – GrafikMode.kmc

Commands:

#ZV, #ZB, #UV, #UB

Open file in KitEditor

```
eDIP240-7 "Graphic-Blinkmode"
...
...
...
;-----
;include Pictures
LOGO = 6
BMP3 = 10
ButRegRight_Small = 11
ButRegBottom_Small = 12
ButRegTop_Small = 14

PATH: <..\..\..\BITMAPS\monochrome\> ;switch to right folder of pictures
Picture: LOGO <howtouselogo1.bmp>

Picture: BMP3 <.\3.bmp>

Path: <..\..\..\BITMAPS\monochrome\button\>
Picture: ButRegRight_Small <RegisterRight35x15_0.bmp>, <RegisterRight35x15_1.bmp>
Picture: ButRegBottom_Small <RegisterBottom30x13_0.bmp>, <RegisterBottom30x13_1.bmp>
Picture: ButRegTop_Small <RegisterTop30x13_0.bmp>, <RegisterTop30x13_1.bmp>

;Include fonts
BIG3 = 8
FONT: BIG3 <.\3.fxt>

;-----
;define constants for normal-macros
MnDraw = 1

;define constants for touch-macros
TmNoblink1 = 1
TmNoblink2 = 2
TmBlinkonoff1 = 3
TmBlinkonoff2 = 4
TmBlinkinvers1 = 5
TmBlinkinvers2 = 6

TmOr = 10
TmDelete = TmOr+1
TmExor = TmDelete+1
TmReplace = TmExor+1
TmInvRepl = TmReplace+1

;-----
```

```

Makro: MnAutoStart
;--- Place ELECTRONIC ASSEMBLY logo ---
#TA ; Terminal off
#UI (XPIXEL-PICTURE_W(LOGO))/2,0,LOGO ; place logo

; draw the big box in the middle of the screen
xs=30
xr=XPIXEL-PICTURE_W(ButRegRight_Small)-xs;calculate the size
yu=YPIXEL-PICTURE_H(ButRegBottom_Small)
#RT xs,PICTURE_H(LOGO)+PICTURE_H(ButRegTop_Small)-1,xr,yu, 7 ; draw rounded box

; draw registers on the top
x=xs+3 ; offset because rounded box in the middle
y=PICTURE_H(LOGO) ; start at the top
b=PICTURE_W(ButRegTop_Small) ; width of button
#AF FONT4x6 ; select touch label font
#AR 1 ; start radio group 1 (top)
#AJ x,y,ButRegTop_Small, TmNoblink1,0, "STATIC"
#AP TmNoblink1,1 ; preset button of radiogroup 1
x=x+b
#AJ x,y,ButRegTop_Small, TmBlinkonoff1,0, "ON/OFF"
x=x+b
#AJ x,y,ButRegTop_Small, TmBlinkinvers1,0, "INVERS"

#AR 0 ; end of radio group 1
; draw registers on the right
x=xr
y=PICTURE_H(LOGO)+PICTURE_H(ButRegTop_Small)+1 ; +1 because of round edges of bounding box
h=PICTURE_H(ButRegRight_Small)
#AR 2
#AJ x,y,ButRegRight_Small, TmOr,0, "L SET"
y=y+h
#AJ x,y,ButRegRight_Small, TmDelete,0, "L DELETE"
y=y+h
#AJ x,y,ButRegRight_Small, TmExor,0, "L INVERS"
y=y+h
#AJ x,y,ButRegRight_Small, TmReplace,0, "L REPLACE"
#AP TmReplace,1 ; preset button of radiogroup 2
y=y+h
#AJ x,y,ButRegRight_Small, TmInvRepl,0, "L INVREPL"
#AR 0 ; end of radio group 2
; draw registers on the bottom
x=xs+3
y=yu
b=PICTURE_W(ButRegBottom_Small)
#AR 3
#AJ x,y,ButRegBottom_Small, TmNoblink2,0, "STATIC"
#AP TmNoblink2,1
x=x+b
#AJ x,y,ButRegBottom_Small, TmBlinkonoff2,0, "ON/OFF"
x=x+b
#AJ x,y,ButRegBottom_Small, TmBlinkinvers2,0, "INVERS"

#AR 0 ; end of radio group 3

#ZV REPLACE ; set the text modes like the preset values
#ZB NOBLINK
#UV REPLACE
#UB NOBLINK

; draw the inner two boxes and the 3
x1=xs+8 ; start of first graphic box
w=32 ; width of graphic box
x2=x1+w ; end of first graphic box
y1=PICTURE_H(LOGO)+PICTURE_H(ButRegTop_Small)+1 ; start of first graphic box, +2 because
of distance to register-buttons
h=35 ; height of graphic box
y2=y1+h ; end of first graphic box
x3=xs+84 ; start of second picture
y3=y1+38; start of fourth picture
xm=x1+w/2 + 1 ; calculate middle of graphic box,
ym=y1+h/2 + 1 ; for drawing of patterns
#RM x1,ym,xm,y2,8
#RM xm,y1,x2,ym,1
#GR x1,y1,x2,y2

#CS x1,y1,x2,y2

```

```

        #CK x1,y3
; place two pictures
        #UI x2+9,y1+2, BMP3
        #UI x2+9,y3+2, BMP3
; place the mathematical operators
        #ZF CHICAGO14
        #ZL x2+3,y1+11,"+"
        #ZL x2+3,y3+11,"+"
        #ZR x3-4,y1+11,"="
        #ZR x3-4,y3+11,"="
; place the 3 as font
        #ZF BIG3
        #MT TmReplace

;-----
--

Makro: MnDraw ; drawing of the both "3" (as picture and font)
        #CK x3,y1 ; place the clipboard back to overwrite old content
        #ZL x3+5,y1+2, "3" ; place picture with flahing-attributes of picture
        #CK x3,y3 ; place the clipboard back to overwrite old content
        #UI x3+5,y3+2, BMP3 ; place picture with flahing-attributes of font

;-----
--
;Touchmacros of set-modes for pictures and fonts
TouchMakro: TmOr
        #ZV SET
        #UV SET
        #MN MnDraw

TouchMakro: TmDelete
        #ZV DELETE
        #UV DELETE
        #MN MnDraw

TouchMakro: TmExor
        #ZV INVERS
        #UV INVERS
        #MN MnDraw

TouchMakro: TmReplace
        #ZV REPLACE
        #UV REPLACE
        #MN MnDraw

TouchMakro: TmInvRepl
        #ZV INVREPL
        #UV INVREPL
        #MN MnDraw

;-----
--
;Touchmacros of blinc-modes for fonts
TouchMakro: TmNoblink1
        #ZB NOBLINK
        #MN MnDraw

TouchMakro: TmBlinkonoff1
        #ZB BLINKONOFF
        #MN MnDraw

TouchMakro: TmBlinkinvers1
        #ZB BLINKINVERS
        #MN MnDraw

;-----
--
;Touchmacros of blinc-modes for pictures
TouchMakro: TmNoblink2
        #UB NOBLINK
        #MN MnDraw

TouchMakro: TmBlinkonoff2
        #UB BLINKONOFF
        #MN MnDraw

```

TouchMakro: TmBlinkinvers2
#UB BLINKINVERS
#MN MnDraw

11.14 Bargraph by touch - BEGINNER

Place a bargraph, that is adjustable by touch. There is a an EXPERT example available, too. Please have a look at [EXPERT - Bargraph by touch](#)^[74]. If you need help using touch functions, please refer to [BEGINNER - 3 simple buttons.kmc](#)^[57].



Folder:

\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\How to use\Bargraph\

File:

BEGINNER - 2 Bargraphs.kmc

Commands:

#BR

Open file in KitEditor

```
eDIP240-7 "2 Bargraphs"
...
...
...

;-----
;include Pictures
Path: <..\..\..\Bitmaps\monochrome>
Picture: 6 <howtouselogol.bmp>
;-----

Makro: MnAutoStart
#TA                               ; Terminal off
#UI 76,0,6

#ZF CHICAGO14                     ; set Textfont to Chicago14 (same as #ZF 5)
#ZL 0,30,"2 Bargraphs adjusted by touch" ; Place text

;---- Place a bargraph no. 1 ----
#BR 1,10,80,200,110,0,100,1,5    ; define bargraph no. 1 with size, value and
type                               ; actualize bargraph no. 1 value
#BA 1,57
#AB 1                               ; define bargraph no. 1 to be adjusted by the
touch

;---- Place another bargraph no. 2 ----
#BO 2,220,30,240,110,0,100,1,3    ; define bargraph no. 2 with size, value and
type                               ; actualize bargraph no. 2 value
#BA 2,38
#AB 2                               ; define bargraph no. 2 to be adjusted by the
touch

#BA 1,87                           ; actualize bargraph no. 1 value; now
brightness is set to 87%
```

11.15 Bargraph by touch - EXPERT

Place a bargraph, that is adjustable by touch. There is a a BEGINNER example available, too. Please have a look at [BEGINNER - bargraph by touch.kmc](#)^[73]. If you need help using touch functions, please refer to [BEGINNER - 3 simple buttons.kmc](#)^[57].


Folder:

\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\How to use\Bargraph\

File:

EXPERT - 2 Bargraphs.kmc

Commands:

#BR

Open file in KitEditor

```
eDIP240-7 "2 Bargraphs"
...
...
...

;-----
;include Pictures
Path: <..\..\..\Bitmaps\monochrome>
LOGO = 6 ; using constants makes it easier to use
Picture: 6 <howtouselogo1.bmp>

;-----
;define stringconstant
!BAR_TOUCH! = "2 Bargraphs adjusted by touch"

;-----

Makro: MnAutoStart
#TA ; Terminal off
#UI (XPIXEL-PICTURE_W(LOGO))/2,0,LOGO ;place picture in the middle of the screen

#ZF CHICAGO14 ; set Textfont to Chicago14 (same as #ZF 5)
ys = 35 ; set start of y value (used as start for bargraph also)
#ZL 0,ys,!BAR_TOUCH! ; Place text

;---- Place a bargraph no. 1 ----
Bar_hor = 1
Bar_ver = 2
ye = 120
#BR Bar_hor,10,100,200,ye,0,100,1,5 ; define bargraph no. 1 with size, value and
type
#BA Bar_hor,57 ; actualize bargraph no. 1 value
#AB Bar_hor ; define bargraph no. 1 to be adjusted
by the touch

;---- Place another bargraph no. 2 ----
par=STRING_P(1,1,0,0) ; string parameter
x=STRING_W(!BAR_TOUCH!, par, CHICAGO14)+10
#BO Bar_ver,x,ys,XMAX,ye,0,100,1,3 ; define bargraph no. 2 with size, value and
type
#BA Bar_ver,38 ; actualize bargraph no. 2 value
#AB Bar_ver ; define bargraph no. 2 to be adjusted
by the touch
```

11.16 Menue - BEGINNER

Show a menu, operable by touch. There is an EXPERT example available, too. Please have a look at [EXPERT - menue.kmc](#)^[77].



Folder:

\\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\How to use\Menue\

File:

BEGINNER – menue.kmc

Commands:

#AM

Open file in KitEditor

```
eDIP240-7    "Menue"
...
...
...
;-----
;include Pictures
Path: <..\..\..\Bitmaps\monochrome>
Picture: 6 <howtouselogol.bmp>
;-----

Macro: MnAutoStart
;--- Place ELECTRONIC ASSEMBLY logo ---
#TA                ; Terminal off
#UI 75,0,6         ; place logo
#ZF CHICAGO14

;--- Place Menue ---
#AF CHICAGO14     ; set font for nenu headline (Chicago 14)
#NF CHICAGO14     ; set Menue font to CHICAGO14
                    ; same as #NF 5
#NY 2             ; adding 2 additional dots between two menue items
#NW 0             ; menu angle
#NT 1             ; touch menu opens automatically

#AM 10,50,83,65,0,0,10, "UCMenu1|Item1|Item2|Item3" ; place Menu1,
opening down (U), text centered (C)                    ; MenuMacro

10+Itemnumber is called                                ; Item1 has no. 0,

Item2 has 1...                                         ;
#AM 83,50,156,65,0,0,20, "UCMenu2|Item1|Item2"         ; place Menu2,
opening down (U), text centered (C)                    ; MenuMacro

20+Itemnumber is called                                ;
#AM 156,50,230,65,0,0,30, "UCMenu3|Item1|Item2|Item3|Item4" ; place Menu3,
opening down (U), text centered (C)                    ;MenuMacro

30+Itemnumber is called

;-----
MenuMacro: 10;Menu 1 Item 1
#ZL 10,100,"Selected: Menue 1, Item 1" ; place text

MenuMacro: 11;Menu 1 Item 2
#ZL 10,100,"Selected: Menue 1, Item 2"
```

```
MenuMacro: 12;Menu 1 Item 3
#ZL 10,100,"Selected: Menue 1, Item 3"

;-----
MenuMacro: 20;Menu 2 Item 1
#ZL 10,100,"Selected: Menue 2, Item 1" ; place text

MenuMacro: 21;Menu 2 Item 2
#ZL 10,100,"Selected: Menue 2, Item 2"

;-----
MenuMacro: 30;Menu 3 Item 1
#ZL 10,100,"Selected: Menue 3, Item 1" ; place text

MenuMacro: 31;Menu 3 Item 2
#ZL 10,100,"Selected: Menue 3, Item 2"

MenuMacro: 32;Menu 3 Item 3
#ZL 10,100,"Selected: Menue 3, Item 3"

MenuMacro: 33;Menu 3 Item 3
#ZL 10,100,"Selected: Menue 3, Item 4"
```

11.17 Menue - EXPERT

Show a menu, operable by touch. There is a a BEGINNER example available, too. Please have a look at [BEGINNER - menu.kmc](#)^[78].



Folder:

\\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\How to use\Menue\

File:

EXPERT – menue.kmc

Commands:

#AM

Open file in KitEditor

```
eDIP240-7 "Menue"
...
...
...
;-----
;include Pictures
Path: <..\..\..\Bitmaps\monochrome>
LOGO = 6 ; using constants makes it easier to use
Picture: LOGO <howtouselogo1.bmp>

!SELECT! = "Selected: Menue " ;use a string constant to save writing

;-----

Macro: MnAutoStart
;--- Place ELECTRONIC ASSEMBLY logo ---
#TA ; Terminal off
#UI (XPIXEL-PICTURE_W(LOGO))/2,0,LOGO ; place logo
#ZF CHICAGO14

;--- Place Menue ---
#AF CHICAGO14 ; set font for nenu headline (Chicago 14)
#NF CHICAGO14 ; set Menue font to CHICAGO14
; same as #NF 5
#NY 2 ; adding 2 additional dots between two menue items
#NW 0 ; menu angle
#NT 1 ; touch menu opens automatically

xb = 73
xs = (XPIXEL-3*xb)/2
ys = 50
yh = 15
x=xs

#AM x,ys,x+xb,ys+yh,0,0,10, "UCMenu1|Item1|Item2|Item3" ; place Menu1, opening
down (U), text centered (C) ; MenuMacro

10+Itemnumber is called ; Item1 has no. 0,
x+=xb ; MenuMacro
Item2 has 1...
#AM x,ys,x+xb,ys+yh,0,0,20, "UCMenu2|Item1|Item2" ; place Menu2, opening
down (U), text centered (C) ; MenuMacro
x+=xb ; MenuMacro
20+Itemnumber is called
#AM x,ys,x+xb,ys+yh,0,0,30, "UCMenu3|Item1|Item2|Item3|Item4" ; place Menu3,
opening down (U), text centered (C) ;MenuMacro
30+Itemnumber is called
```

```
;------  
x = 10  
y = 100  
MenuMacro: 10;Menu 1 Item 1  
#ZL x,y,!SELECT! "1, Item 1" ; place text  
  
MenuMacro: 11;Menu 1 Item 2  
#ZL x,y,!SELECT! "1, Item 2"  
  
MenuMacro: 12;Menu 1 Item 3  
#ZL x,y,!SELECT! ", Item 3"  
  
;------  
MenuMacro: 20;Menu 2 Item 1  
#ZL x,y,!SELECT! ", Item 1" ; place text  
  
MenuMacro: 21;Menu 2 Item 2  
#ZL x,y,!SELECT! "2, Item 2"  
  
;------  
MenuMacro: 30;Menu 3 Item 1  
#ZL x,y,!SELECT! "3, Item 1" ; place text  
  
MenuMacro: 31;Menu 3 Item 2  
#ZL x,y,!SELECT! "3, Item 2"  
  
MenuMacro: 32;Menu 3 Item 3  
#ZL x,y,!SELECT! "3, Item 3"  
  
MenuMacro: 33;Menu 3 Item 3  
#ZL x,y,!SELECT! "3, Item 4"
```

11.18 Automatic Macro - BEGINNER

A little animation with the help of automatic macros. There are further examples available, containing information about Outputs (see [BEGINNER - Outputs](#)^[82]) and another AutomaticMacro example (see [EXPERT - Automatic_Macro.kmc](#)^[80])



Folder:

\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\How to use\Macro\

File:

BEGINNER – AutomaticMacro_as_animation.kmc

Commands:

#MJ, #UI

Open file in KitEditor

```
eDIP240-7  "Automatic Macro as animation"
...
...
...
;-----
;include Pictures
Path: <..\..\..\Bitmaps\monochrome>
Picture: 6 <howtouselogol.bmp>
Picture: 7 <Kopf\kopf1.bmp>
Picture: 8 <Kopf\kopf2.bmp>
Picture: 9 <Kopf\kopf3.bmp>
Picture: 10 <Kopf\kopf4.bmp>
Picture: 11 <Kopf\kopf5.bmp>

;-----

Macro: MnAutoStart
;--- Place ELECTRONIC ASSEMBLY logo ---
    #TA                                ; Terminal off

    #UI 75,0,6                          ; place logo

;---- Start animation ----
    #UV 5                                ; invert pictures
    #MJ 1,5,3                            ; run macros 1..6 automatically
                                           ; MJ = Ping Pong Mode, Pause is 3/10s

;---- Place pictures in different Macros ----

Macro: 1
    #UI 97, 55, 7

Macro: 2
    #UI 97, 55, 8

Macro: 3
    #UI 97, 55, 9

Macro: 4
    #UI 97, 55, 10

Macro: 5
    #UI 97, 55, 11
```

11.19 Automatic Macro - EXPERT

A little animation with the help of automatic macros. There are further examples available, containing information about Outputs (see [BEGINNER - Outputs](#)^[82]) and another AutomaticMacro example (see [BEGINNER - AutomaticMacro as animation.kmc](#)^[79]).


Folder:

\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\How to use\Macro\

File:

EXPERT – Automatic_Macro.kmc

Commands:

#YW, #YM

Open file in KitEditor

```
eDIP240-7 "Automatic Macro"
...
...
...
;-----
;include Pictures
Path: <..\..\..\Bitmaps\monochrome>
LOGO = 6 ;using constants makes it easier
Picture: LOGO <howtouselogo1.bmp>

;-----
;define constants for macros
Mn1 = 1
Mn2 = Mn1+1
Mn3 = Mn2+1
Mn4 = Mn3+1
Mn5 = Mn4+1
Mn6 = Mn5+1

;-----

Macro: MnAutoStart
;--- Place ELECTRONIC ASSEMBLY logo ---
    #TA ; Terminal off

    #UI (XPIXEL-PICTURE_W(LOGO))/2,0,LOGO ; place logo

;---- Count up and down ----
    #ZF BIGZIF57 ; set font to no. 7 (BIGZIF57)
time=5
    #MJ Mn1,Mn6,time ; run macros 1..6 automatically
; MJ = Ping Pong Mode

;---- Place characters in different Macros ----
x=XPIXEL/2
y=50
Macro: Mn1
    #ZC x,y, "1"

Macro: Mn2
    #ZC x,y, "2"

Macro: Mn3
    #ZC x,y, "3"
```


Macro: Mn4
#ZC x,y, "4"

Macro: Mn5
#ZC x,y, "5"

Macro: Mn6
#ZC x,y, "6"

11.20 Outputs - BEGINNER

Get into the use of BitMacros, i.e. get an idea of working with I/Os. There are further examples available, containing information about AutomaticMacro (see [BEGINNER - AutomaticMacro as animation.kmc](#)^[79]) and another AutomaticMacro example (see [EXPERT - Automatic_Macro.kmc](#)^[80])



Folder:

\\ELECTRONIC_ASSEMBLY_LCD-Tools-Portable\Data\eDIP - intelligent graphic displays\eDIP240-7\How to use\Macro\

File:

BEGINNER – Outputs.kmc

Commands:

#YW

Open file in KitEditor

```
eDIP240-7 "Output"
...
...
...
;-----
;include Pictures
Path: <..\..\..\Bitmaps\monochrome>
Picture: 6 <howtouselogol.bmp>
;-----

Macro: MnAutoStart
;--- Place ELECTRONIC ASSEMBLY logo ---
#TA ; Terminal off
#UI 75,0,6 ; place logo

;--- Place 1 button ---
#AF 4 ; touch font
#AE 4 ; touch frame
#AT 2,30,90,50,1,0,"Port 1 toggle" ; place touchbutton with touchmacro no. 1

;-----
TouchMacro: 1
#YW 1, 2 ; toggle output 1 (Pin 6 if interface is RS232)
```